


DCY3S ERA 3* High Security Euro Cylinder Fitting Instructions

User Statement:

This cylinder offers resistance to the commonly used types of attack. No specific security hardware is required but installing this three-star cylinder in conjunction with security hardware complying with TS007 will increase attack resistance still further.

Security hardware can be of several types, including a handle with a reinforced backplate, an escutcheon or a device which is concealed behind the handle backplate. In all cases, the purpose is to protect your cylinder from force attack.

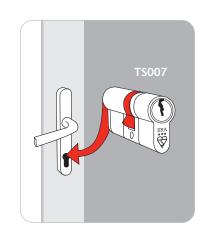

Installing a High Security 3* Cylinder

To fit a high security cylinder you will require:


Screwdriver

 
Ruler

When installing a new cylinder it is important to select the correct size and style of cylinder for your door. You need to measure accurately to ensure that the new cylinder is the correct size for the lock and the external half is long enough to sit flush against the external handle when fitted, without too much of the cylinder protruding (maximum of 3mm).

IMPORTANT: the security protection is on the external (EXT) side of the cylinder, so you must ensure that the cylinder is fitted/measured the correct way round, so the EXT side of the cylinder is visible from the outside of the door. This is denoted by EXT marked on the cylinder itself.

Euro Profile Single

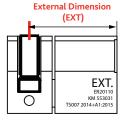




Key opening externally only. No requirement to operate internally. The first size in the part number is always 10 (INT), the second size (as indicated) is the External (EXT) measurement:


E.g. DCY3SES1035 PCSK

Euro Profile Double

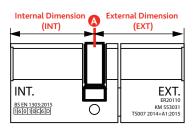

Key opening from both sides of the door.
Controlled access internally and externally.
The first size in the part number (as indicated) is the Internal (INT) measurement:
E.g. DCY3SED3740PCSK

Euro Profile Thumbturn

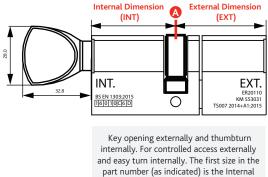

turn side (INT) measurement:
E.g. DCY3SET 4537PCSK

How to measure a Cylinder

If the cylinder has been removed, using a ruler, measure from the centre of the cam (A) to the edge of the cylinder on the Internal side (INT) and then measure from the centre of the cam (A) to the edge of the cylinder on the External side (EXT) in mm. Note: Your cylinder may be longer on one side than the other. E.g. 37mm Internal and 40mm External. You do not need to measure the INT side on a Single cylinder. To measure a cylinder, whilst still in the door, using a ruler, measure from the centre of the screw hole to the end of cylinder (see diagram overleaf). Measurement (INT) is the centre to the edge of the cylinder which is inside facing. Measurement (EXT) is the centre to the edge of the cylinder which is outside facing.



DCY3S **ERA 3* High Security Euro Cylinder Fitting Instructions**

How to change a cylinder on a PVCu or Composite door (with multi-point door lock)

To remove your existing cylinder, open the door. On the open edge of the door look for the larger screw which falls in line with the bottom of the cylinder and remove screw. With the key inserted into the cylinder, turn slightly while pulling to enable the cylinder to be removed from the door. Measure each side of the existing cylinder in mm (see overleaf), be sure to note which is the Internal (INT) and External (EXT) side of the cylinder to ensure you get the correct size.

Purchase your new ERA 3* High Security Cylinder.

To fit the new cylinder, you MUST firstly ensure that the external (EXT) side of the cylinder is facing outside the property. With the key inserted into the cylinder, slightly turn, so the cam is positioned centrally to allow the cylinder to slide easily into the door. Secure the cylinder in position with the screws provided (these may need to be cut down to size) and test operation using the key.

How to change a cylinder on a Timber door (with a mortice lock)

To remove you existing cylinder, open the door. On the open edge of the door remove the two screws from the face plate, this will reveal another screw which falls in line with the bottom of the cylinder and remove the screw. With the key inserted into the cylinder, turn slightly while puling to enable the cylinder to be removed from the door. Measure each side of the existing cylinder in mm (see overleaf), be sure to note which is the Internal (INT) and External (EXT) side of the cylinder to ensure you get the correct size. Purchase your new ERA 3* High Security Cylinder.

To fit the new cylinder, you **MUST** firstly ensure that the external (EXT) side of the cylinder is facing outside the property. With the key inserted into the cylinder, slightly turn, so the cam is positioned centrally to allow the cylinder to slide easily into the door. Secure the cylinder in position with the screws provided (these may need to be cut down to size) and test operation using the key.

Maintenance

Wipe the surface periodically with a soft cloth to remove excess grease or moisture. Please only use a non-acidic oil such as '3 in 1 oil', avoid using lubricants such as WD40.

Anti-Snap Guarantee

Please register your Anti-Snap guarantee at: www.erahomesecurity.com Guarantee must be registered within 30 days of purchase. Terms and Conditions apply.

Classification

The ERA 3 Star high security cylinder carries the British Standard 3* Kitemark TS007:2014+A2:2018 and BS EN 1303:2015 accreditations.

